



Crosbys Salamander Instruction Manual

Models

CRE- SALAMHANG – Salamander Grill

Thank you for purchasing your Crosbys Salamander. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Crosbys supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not use this product outside
- Clean immediately if oil/fat comes into contact with plastic components
- Do not carry when hot
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Crosbys Salamander
- 1 x Shelf

Before Use

- Remove all packaging including all protective plastic, from your Crosbys Salamander
- Position on a flat surface
- Ensure the shelf is correctly positioned
- Plug your Crosbys Salamander into the mains
- The Salamander will now be ready to turn on

Operation

- Ensure the salamander is plugged in and the power is on
- Select the temperature you require, the green light will come on and the elements will then start to heat
- Your salamander is ready to use

Cleaning & Maintenance

- Before cleaning disconnect the salamander from the electricity supply
- Remove the shelf fat collection tray and clean in warm soapy water
- All other parts of the salamander can be cleaned with a damp cloth
- DO NOT submerge the salamander in water or use water sprays to clean it
- Always clean your Crosbys Salamander daily, this will stop grease building up and becoming difficult to clean.

Troubleshooting

Fault	Possible Cause	Solution
The salamander is not working	Appliance may not be switched on Fuse has blown Internal fault	Check and switch on Change the fuse
The salamander is not reaching temperature	The thermostat may need to be replaced	Contact your Crosbys distributor
Indicator is not on when the power is on and the salamander is heating	Power indicator light may need to be replaced	Contact your Crosbys distributor

Transportation and Storage

Please handle your salamander with care to prevent any damage to the unit and internal parts. The salamander should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

CRE- SALAMHANG – Salamander

Voltage 220~240v 50/60Hz

Power 2Kw

Weight 7.7kg

Dimensions 370 x 305 x 245 mm

- Crosbys Salamanders are supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Crosbys distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Crosbys distributor or local authority responsible for waste disposal.

Compliance



All Crosbys parts and products have under gone a stringent testing process to ensure that comply with the provisions of the relevant specific standards and all UK legislations.

Meanwhile, they also comply with all European standards and specifications. All Crosbys products carry the UKCA and CE approval symbols.